



Installation Requirements – Please Read Before Installing Your Gogglewash Machine

GOGGLEWASH MACHINE Installation Details

Siting

The machine must be sited on a sound level surface, with adequate clearance for servicing. Use the adjustable feet to ensure that the machine is level and that its weight is evenly distributed on each foot.

Electrical

The machine is supplied for single phase 240v operation, complete with a mains cable.

A switched spur must be positioned within one metre of the machine and be accessible. This machine **MUST** be earthed. Use of an RCD is recommended.

The 4mm³ mains cable must be wired directly into a fused double pole isolating switch (with contact separation of at least 3mm in all poles). Fuse @ 25 Amps.

Water

A single (hot or cold) water supply is required. A cold water supply is recommended. A hot water supply must not exceed 60°C.

The water supply must terminate with easily accessible ¾" BSP Tap within one metre of the machine.

The machine incorporates a Type 'A' Airgap and can be connected to any water supply.

Waste

The machine has a pumped waste system which requires a trapped open-vent up-stand, a minimum of 450mm from the base of the machine. The outlet hose is hooked into the top of the up-stand (100mm max - insertion to avoid siphoning).

Chemicals

Fit the chemical weights and filters to the chemical suction tubes (clear and blue) and insert into the external 5 litre Cleaner and Rinser bottles. The clear tube is for the Cleaner. The blue tube is for the Rinser.

If You Require Help



Owners Manual

Refer to USB stick for more information and advice



Service and Sales

Tel: 01933 666244



Website & Email

www.clenaware.co.uk
info@clenaware.co.uk





Installation Requirements – Please Study Before Installing Your Gogglewash Machine

GOGGLEWASH MACHINE Installation Details

