



Installation Requirements – Please Read Before Installing Your Jubilee 50 Machine

JUBILEE 50
Installation Details

Siting

The machine must be sited on a sound level surface, with adequate clearance for servicing. Use the adjustable feet to ensure that the machine is level and that its weight is evenly distributed on each foot.

	п
ectrica	ш
CCUICO	П

30 Amp machine:	Supplied for single phase 230-240v 50Hz operation, fitted with a 4mm ² 3-core H07-RNF
<u>-</u>	mains cable. Fuse @ 25 Amps.

13 Amp machine (de-rated):	Suitable for single phase 230-240v 50Hz operation, fitted with a 1.5mm ² 3-core H07-RNF
	mains cable. Fuse @ 13 Amps.

3-phase machine:	Supplied for three phase 400-415v (3Ph + N) 50Hz operation, fitted with a 2.5mm ² five core
	H07-RNF mains cable. Fuse @ 15 Amps per phase

The mains cable must be connected to a fused all-pole isolating switch (with contact separation of at least 3mm in all poles). The isolating switch must be positioned within one metre of the machine and be accessible. The machine MUST be earthed. An RCD is recommended.

Water

A hot or cold single water supply is required. A hot water supply is recommended but must not exceed 60°C. The water supply must terminate with easily accessible 3/4" BSP Tap within one metre of the machine. The machine incorporates a Type 'A' Airgap and can be connected to any water supply.

Waste

The machine has a pumped waste system which requires a trapped open-vent up-stand, a minimum of 450mm from the base of the machine. The outlet hose is hooked into the top of the up-stand (100mm max - insertion to avoid siphoning).

Chemicals

Fit the chemical weights and filters to the chemical suction tubes (clear and blue) and insert into the external 5 litre detergent and rinse-aid bottles. The clear tube is for detergent. The blue tube is for rinse-aid.

If You Require Help



Owners Manual
Refer to CD ROM for more
information and advice





Service and Sales
Tel: 01933 666244





Website and Email www.clenaware.co.uk info@clenaware.co.uk





Installation Requirements – Please Study Before Installing Your Jubilee 50 Machine

JUBILEE 50
Installation Diagram

